



FoxESS UK Ltd.

Unit C1 Loades Ecoparc, Blackhorse Road, Coventry CV7 9FW
www.fox-ess.uk | service.uk@fox-ess.com

Firmware Upgrade Standard Operating Procedure

(To be completed before using the inverter)

Step 1:

Open the box and locate the USB stick provided for firmware upgrading.

Step 2:

Switch the DC switch to the **“On”** position and press the power button for approximately **5 seconds** until the screen lights up.

Once the inverter is powered on, insert the USB stick.

Step 3:

The upgrade interface will appear on the screen.

Select the **Manager** option to begin upgrading.

The firmware upgrade sequence should follow this order:

Manager → Master → Slave

Step 4:

Wait approximately **15–20 minutes**. When the screen restarts and displays a new interface, the upgrade is complete.

This initial firmware upgrade ensures your inverter operates with the latest features and optimisations for peak performance.

For further assistance, please contact us:

UK Hotline: 020 7052 3472

Email: service.uk@fox-ess.com