

Solis Standard Operating Procedure

Greenrich-LV Battery Set UP

Overview


Method

Quick Overview


1. Login to the inverters Bluetooth admin
2. Select the **"Settings"** menu option.
3. Select the **"Advanced Settings"** menu item.
4. Select **"Battery setting"** menu item.
5. Select Lithium Battery as Type
6. Select Greenrich as Model

CAN Configuration

SOLIS Inverter side

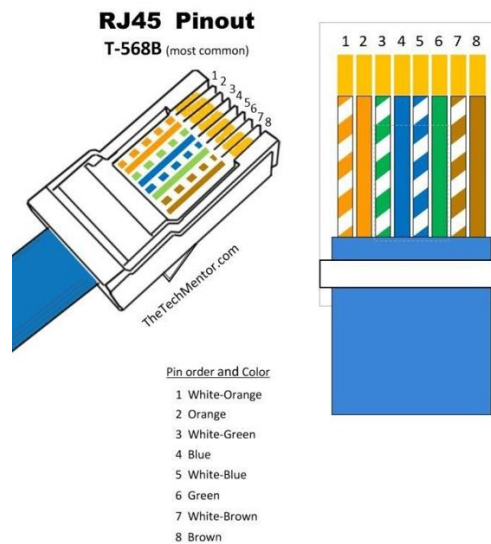

Greenrich Battery Side

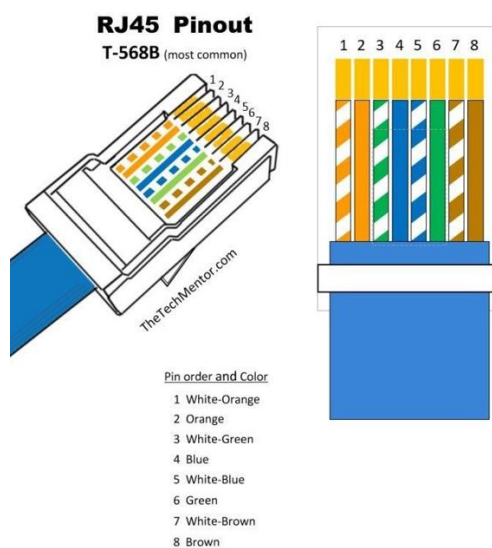

Battery Parallel “Dip Switch” Configuration

Set the master batteries dip switch 1 to the ON position (up), for the first slave batteries set dip switch 2 ON, for the second slave batteries set dip switch one and two to ON, for the third batteries set dip switch 3 to ON (see illustration below).




No.1 No.2 No.3 No.4


Address	Position of the dial code switch			
	#1	#2	#3	#4
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON


Detailed Step-By-Step

Step 1: Once logged into Bluetooth, select **"Settings"**

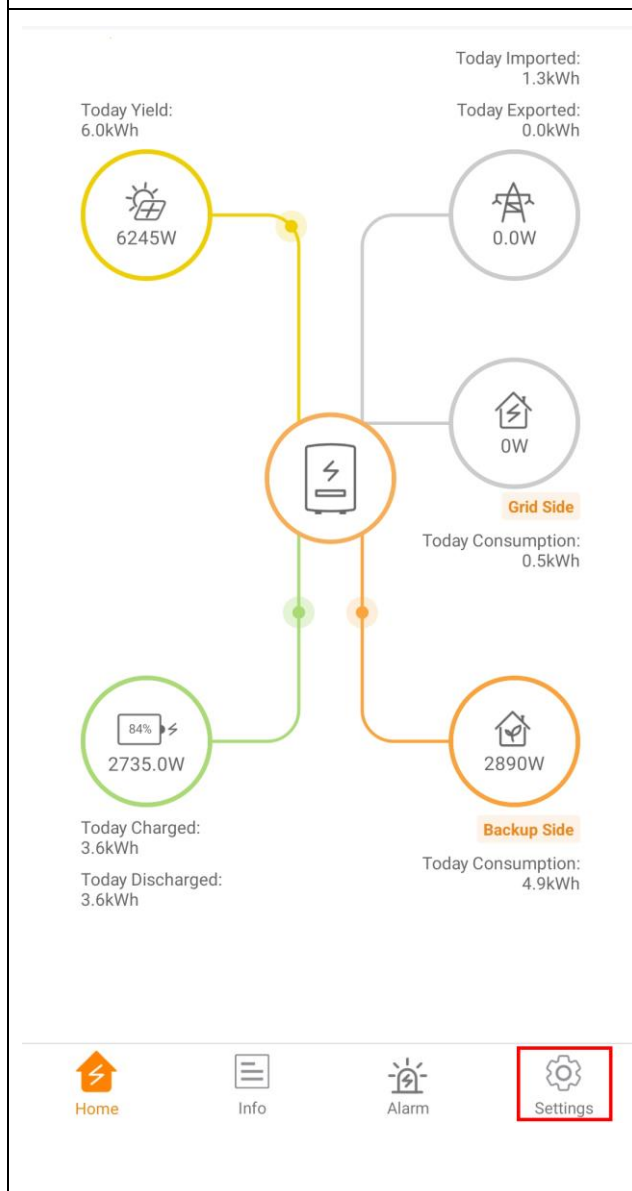

Step 2: Select the **"Battery Setting"** menu item

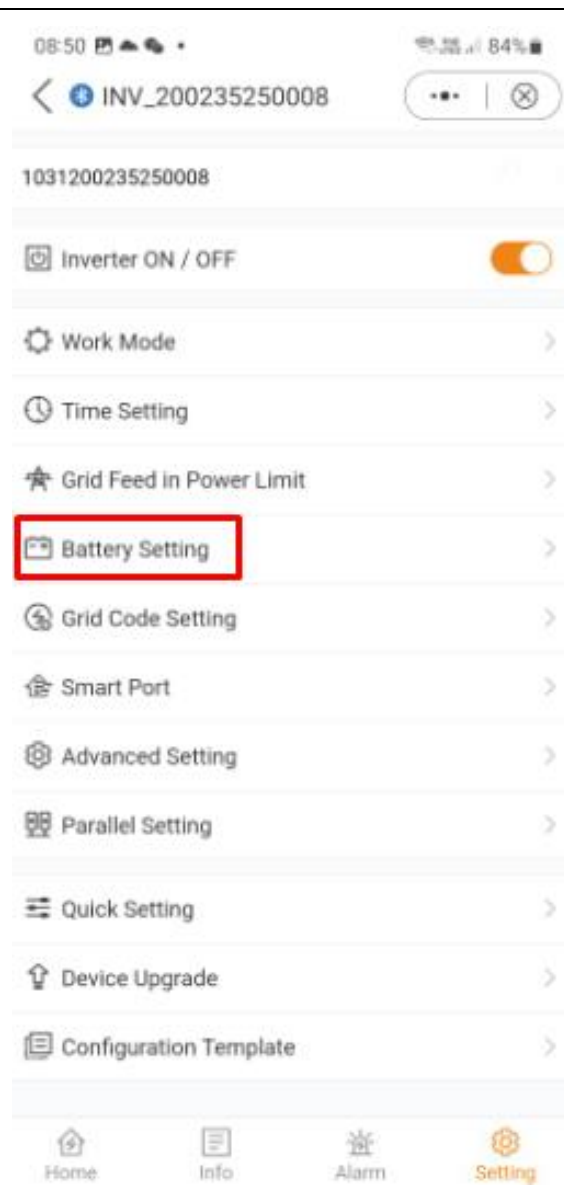

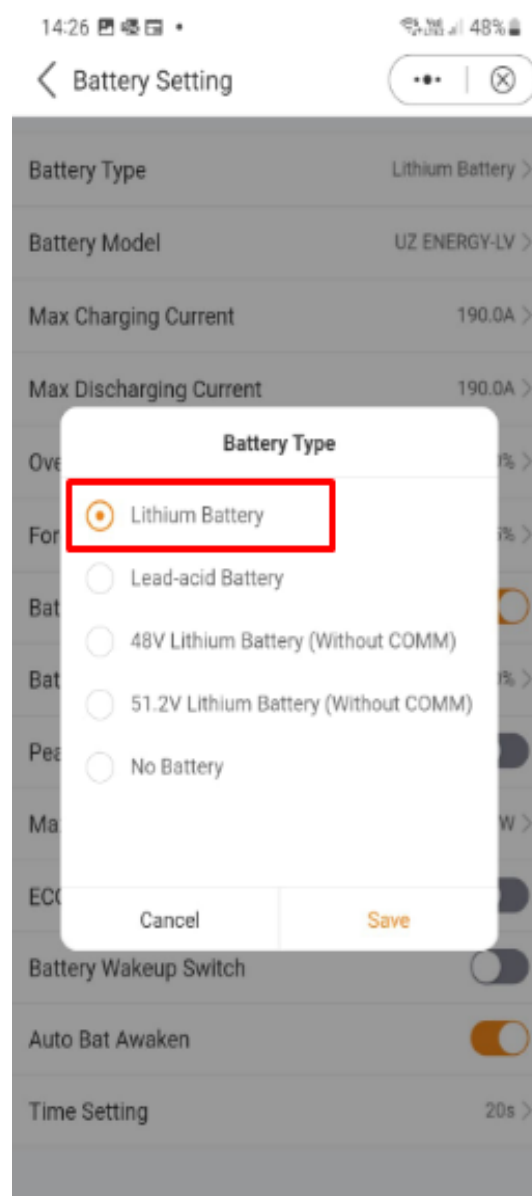Step 2: Select the “Battery Type” menu


Step 4: Select the "Battery Model" menu

